




## INSTRUKCJA MONTAŻU

BRAMA OGRODZENIOWA  
SZAFIR




# ZAWARTOŚĆ OPAKOWAŃ

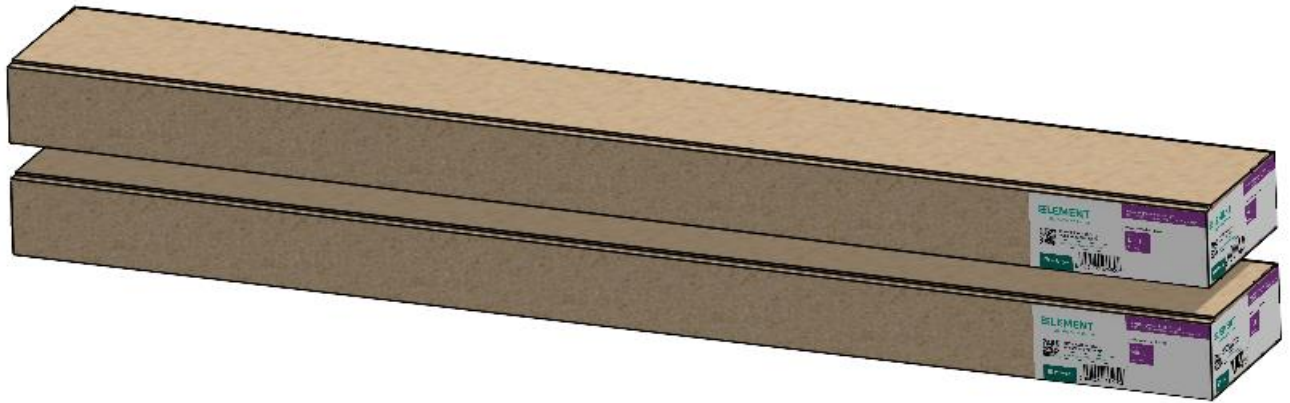

12x [a]  100x20



10x [b]  100x20



4x [c]  25x25



2x [d]  40x30



2x [e]  40x30



2x [f]  40x40



4x (M8x70) [A]



24x (M6x25) [B]



20x [C]

4x [D]



4x [E]



24x [F]





20x [G]




1x [H]




## POTRZEBNE NARZĘDZIA

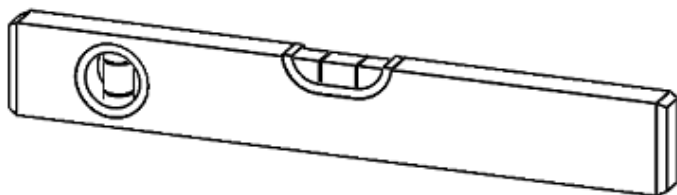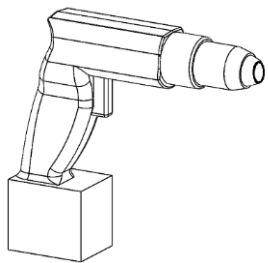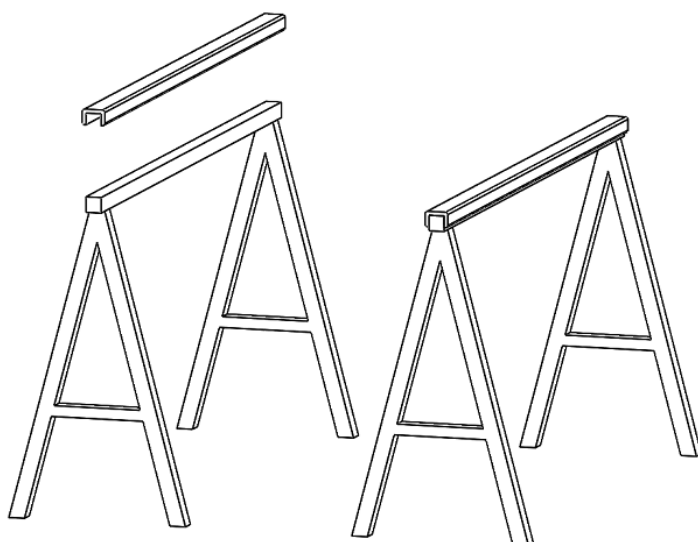




BIT PH 2

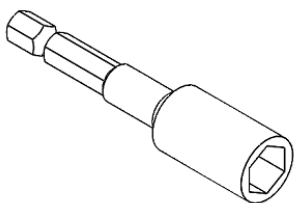


HEX M8



HEX 5

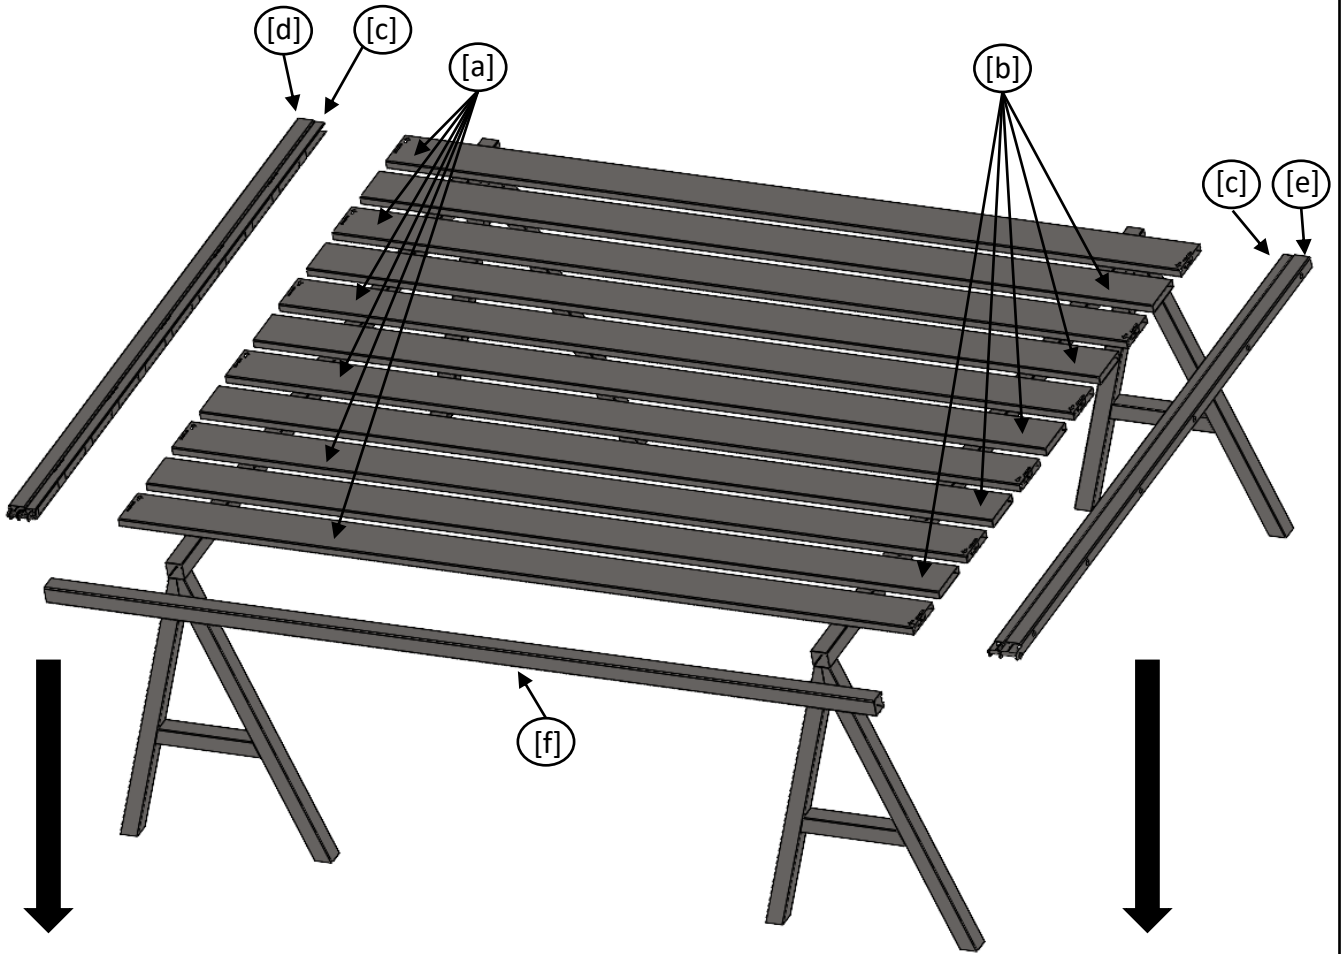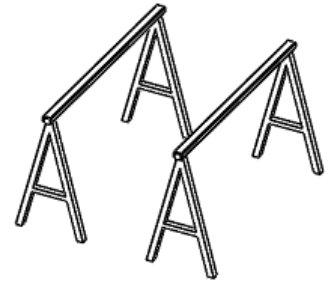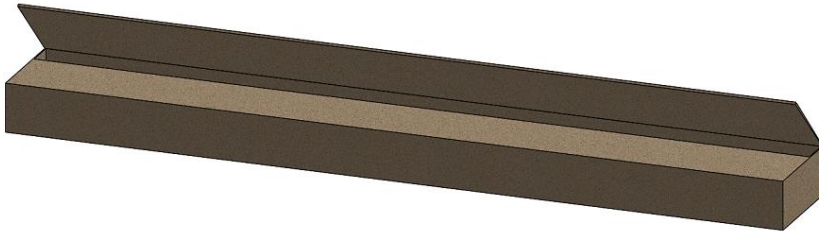

[ 1 ]



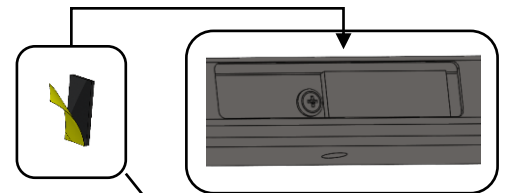


[c]






[d] / [e]




[ 2 ]

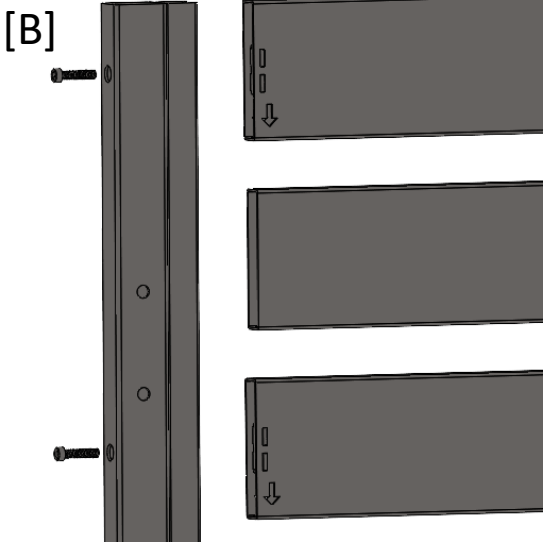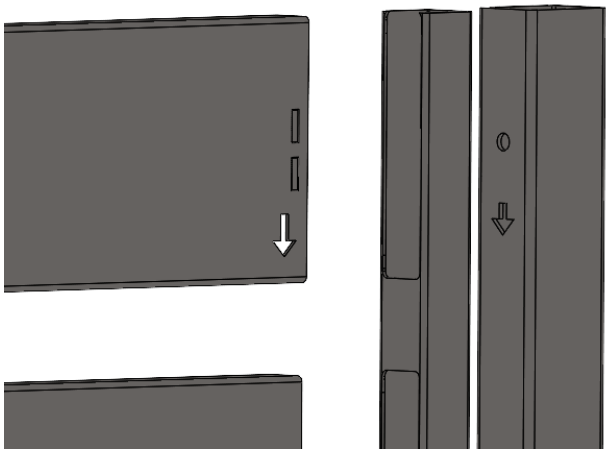


[ 3 ]

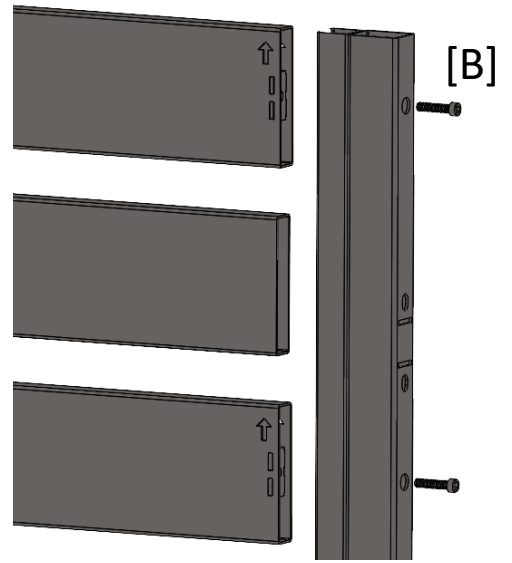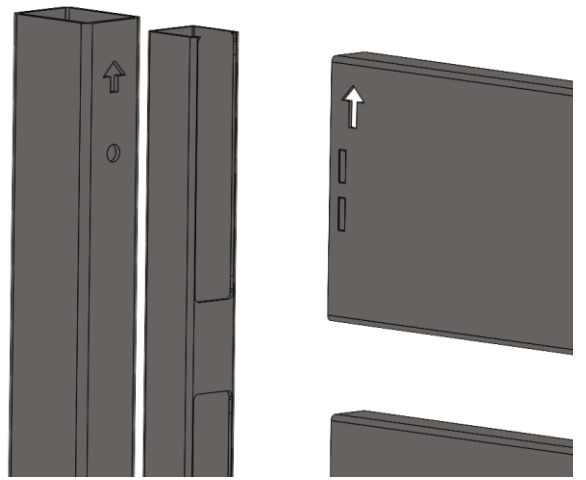

[ 4 ]

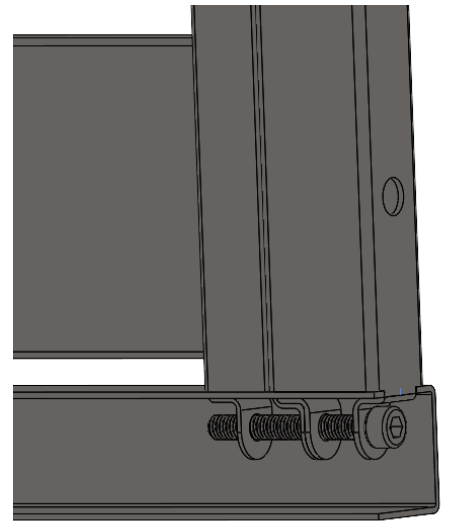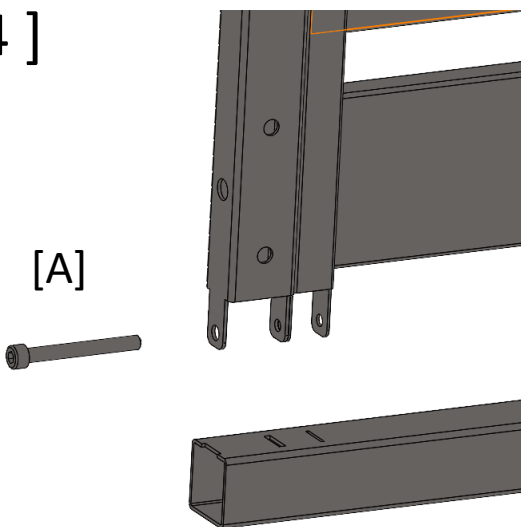


[ 5 ]

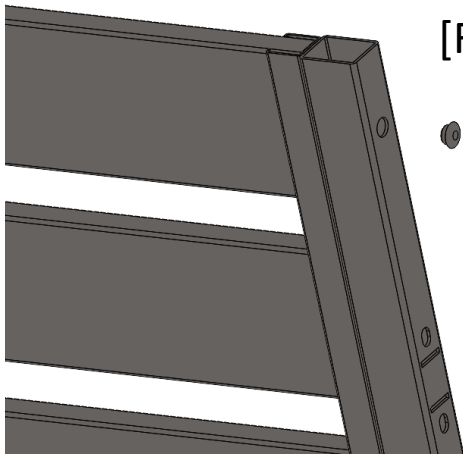


[F]

[ 6 ]

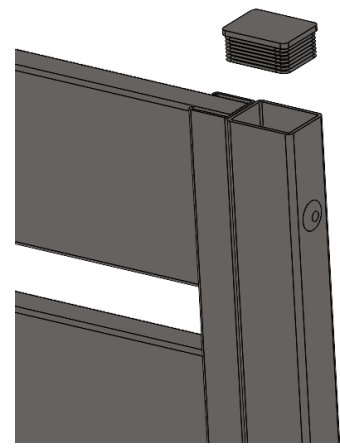

[D]

[ 7 ]

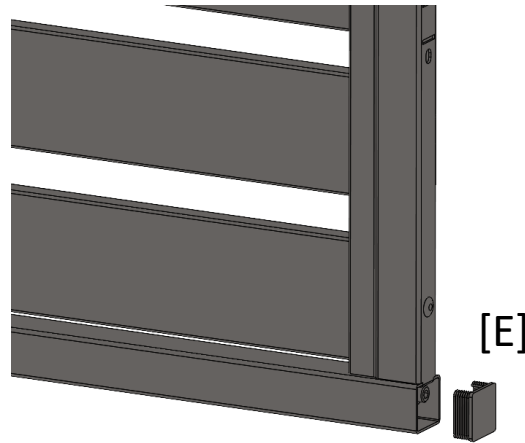

[E]


### AUTOMAT




2x [I]



20x [J]

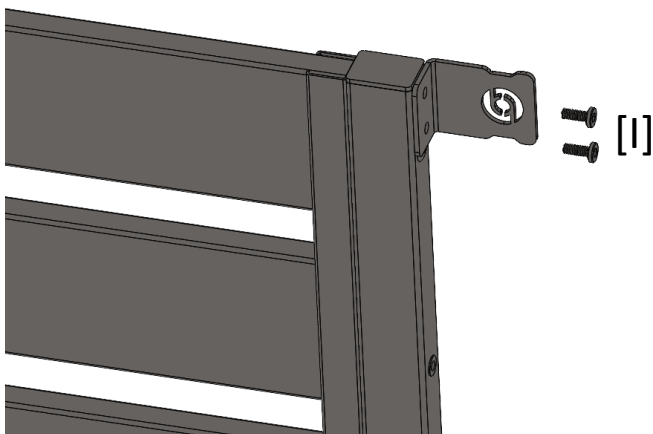

[I]

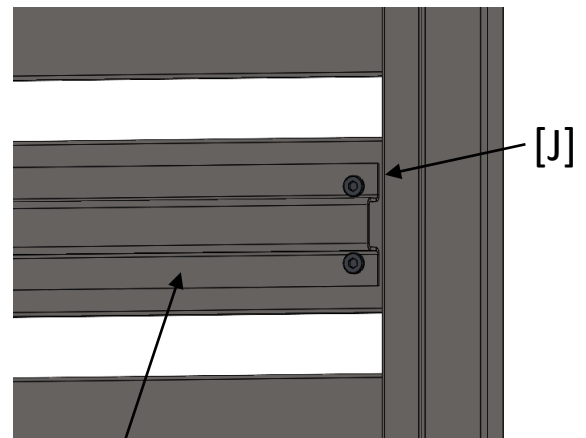

[J]

