



INSTRUKCJA MONTAŻU

FURTKA OGRODZENIOWA
SZAFIR

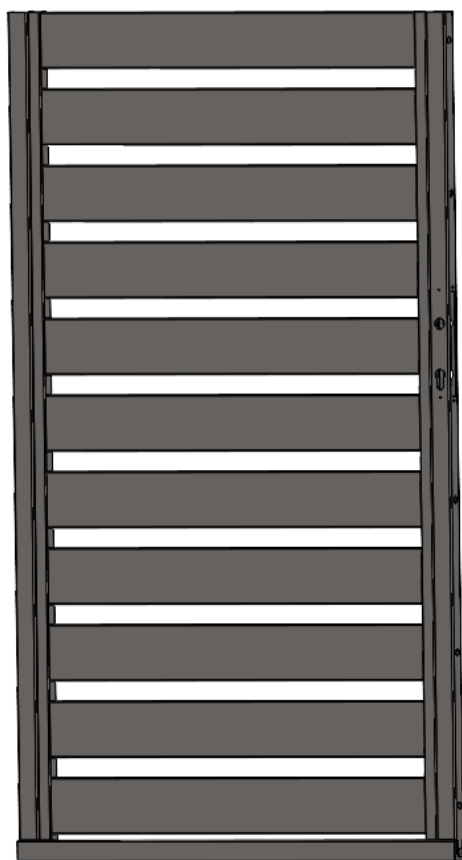

ZAWARTOŚĆ OPAKOWAŃ

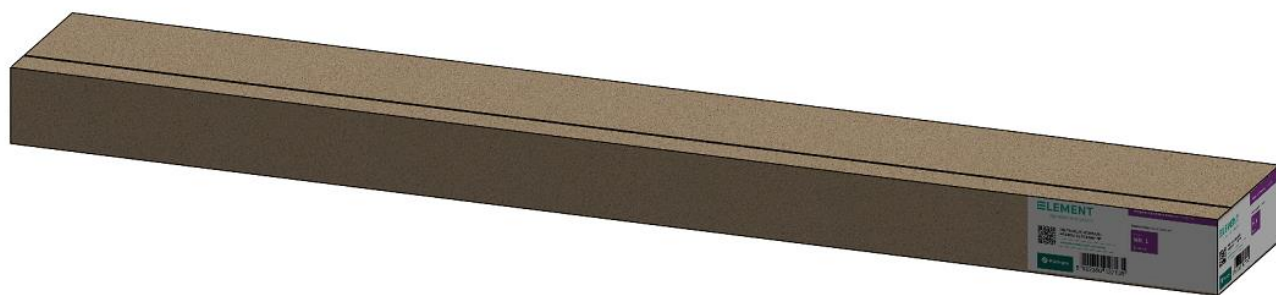

6x



5x



2x



1x



1x




1x



2x (M8x70) [A]



12x (M6x25) [B]

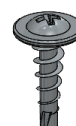

10x [C]

2x [D]



2x [E]



10x [F]







10x [G]




1x [H]




POTRZEBNE NARZĘDZIA

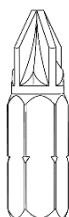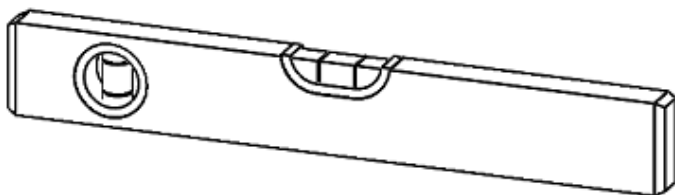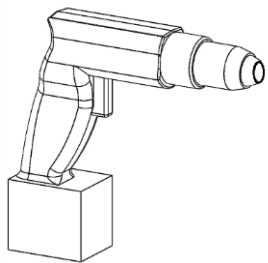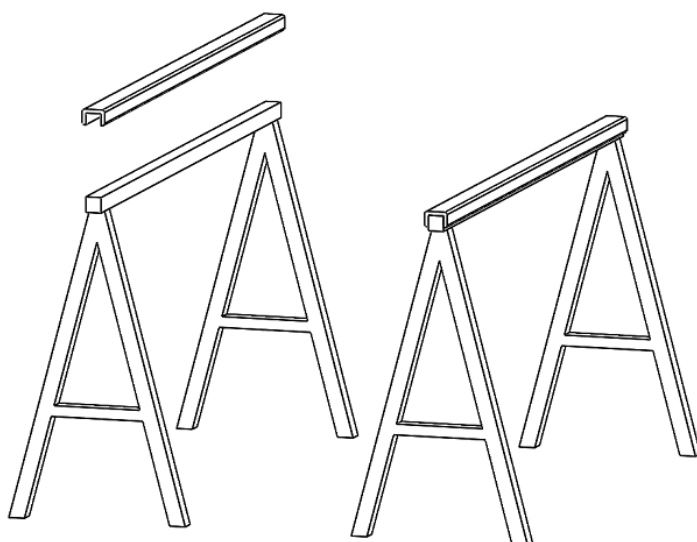



BIT PH 2

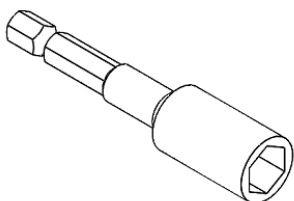

HEX M8

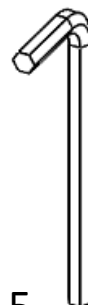

HEX 5

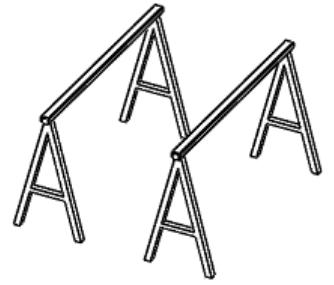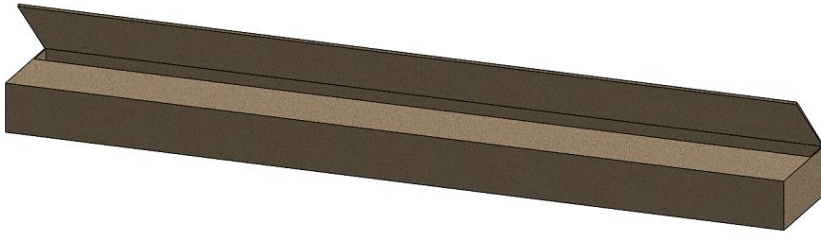


[1]



[G]




[C]

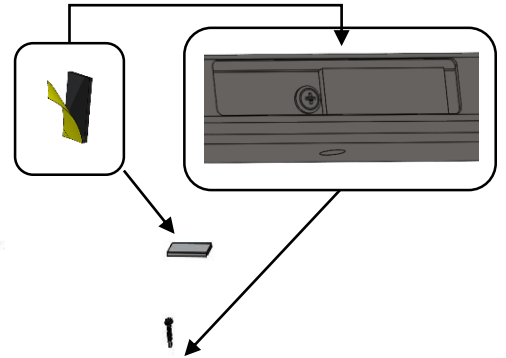



[2]

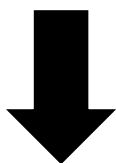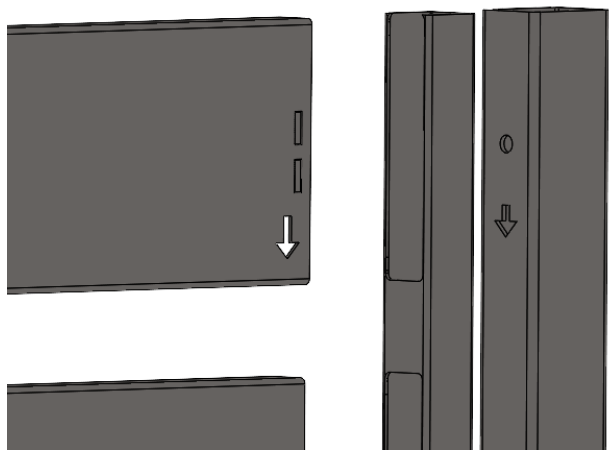


[B]

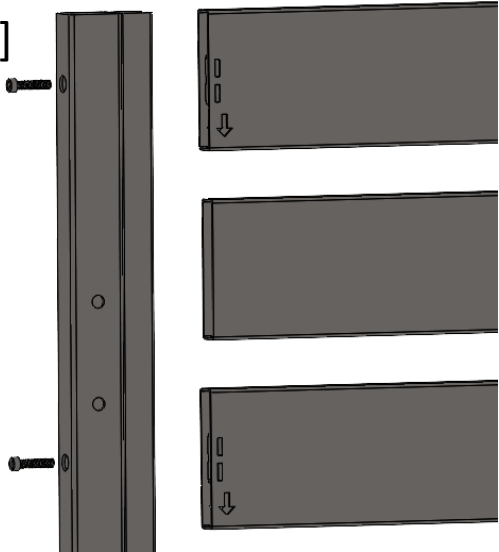




[3]

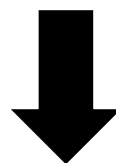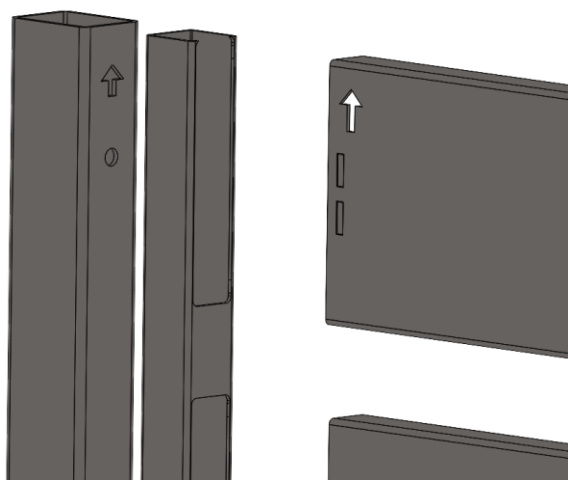


[B]

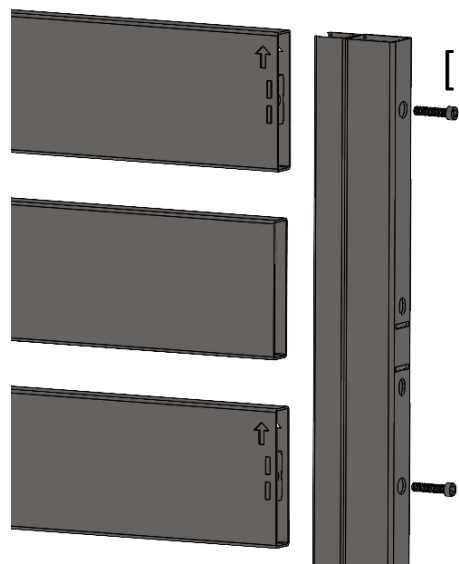


[4]

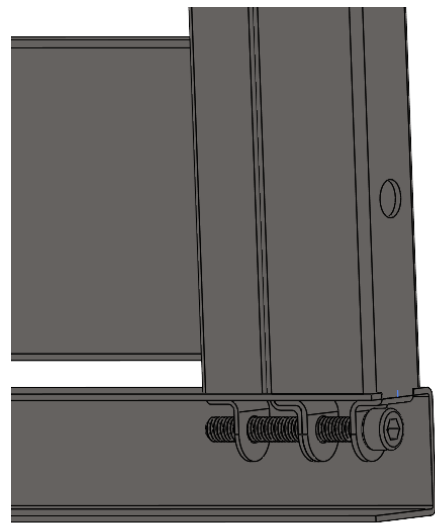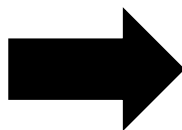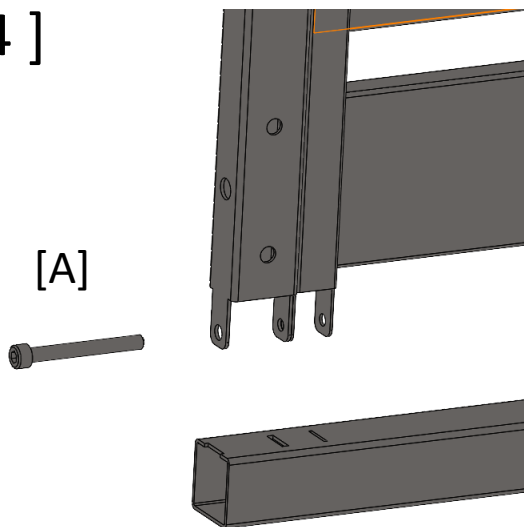

[5]

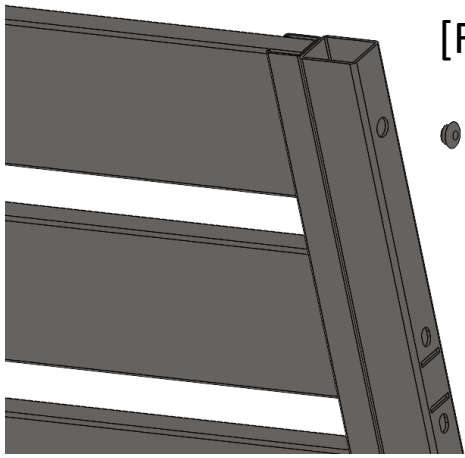

[6]

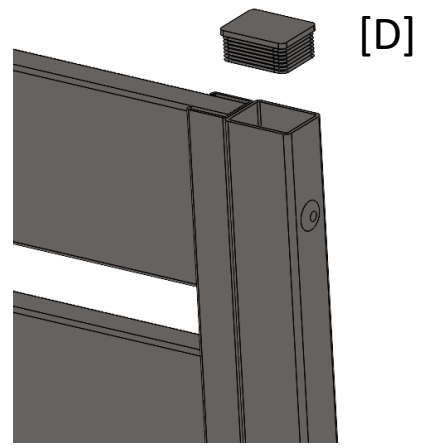

[7]

